


Xari

user manual & warranty

mima[®]

ENGLISH

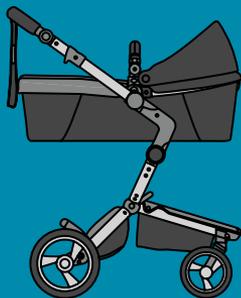

Dear parents, grandparents, and friends,

Thank you for choosing **xari** and making it part of your family!

Our products are designed and developed with great care for your own comfort and safety of your child. We hope you enjoy **xari**.

Please follow these instructions carefully before using the pushchair for the first time. This will guarantee safe usage of the product and enable you to find out about all its handy features.

mima

INDEX

WHAT YOU GET

IMPORTANT & WARNINGS

CARE AND MAINTENANCE

WARRANTY

GETTING STARTED

FIRST SETUP

WHEELS

HANDLEBAR HEIGHT

TETHER STRAP

PARKING BRAKE

FOLDING AND UNFOLDING

STAGE 1: BABY

CARRYCOT

SAFETY BAR

CANOPY

APRON

STAGE 2: TODDLER

SAFETY HARNESS

SEAT

SAFETY BAR

CANOPY

ACCESSORIES

CAR SEAT*

xari sport SEAT*

RAIN COVER

MOSQUITO NET*



WINTER OUTFIT*

*Sold separately

WHAT YOU GET

Please make sure that you have received all the parts that are listed below.
If anything is missing, please contact your retailer.

- 1 chassis
- 2 front wheels
- 2 rear wheels
- 1 rain cover
- Front and rear basket mesh
- 1 apron flap
- 1 seat pad with safety harness
- 1 carrycot mattress
- 1 seat with carrycot inside
- 1 canopy
- 2 canopy fixing screws
- 7 harness fixing screws
- 1 carrycot apron
- Front and rear basket covers
- 1 handlebar sleeve
- 1 safety bar

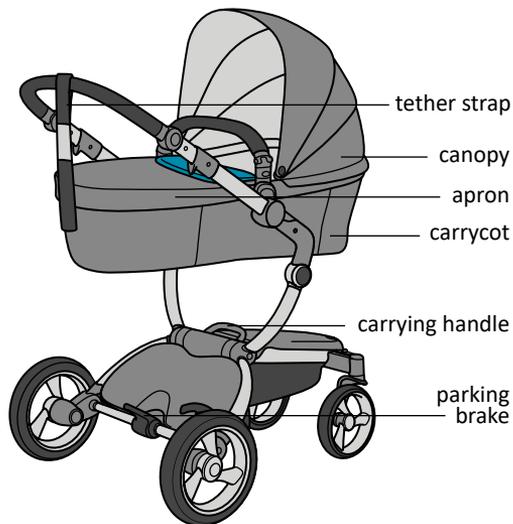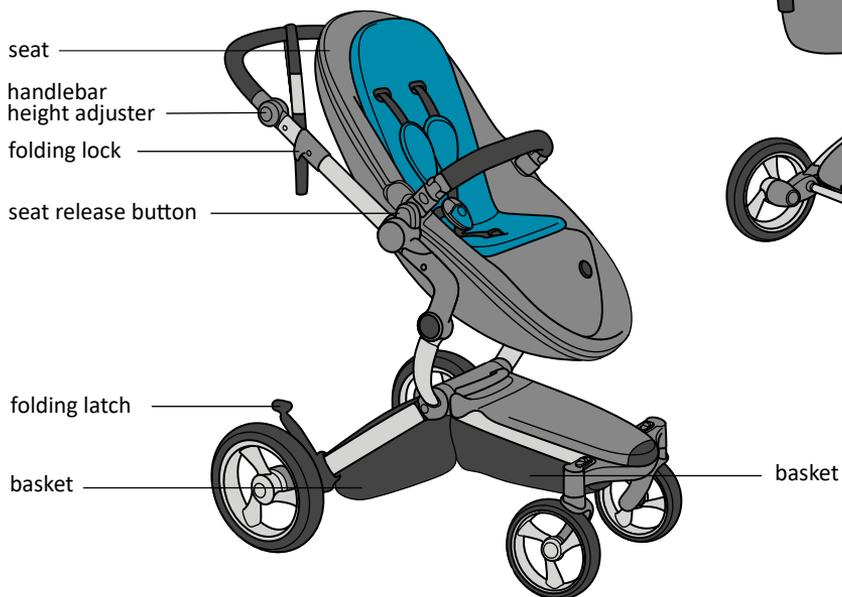

⚠️ IMPORTANT!

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

Please read them carefully before using your **mima xari**.

⚠️ WARNINGS!

- WARNING: TO AVOID INJURY OR DEATH: ALWAYS APPLY THE BRAKES WHENEVER THE PRAM/STROLLER IS STATIONARY.
 - DO NOT LEAVE CHILDREN UNATTENDED.
 - SECURE THE CHILD IN THE HARNESS AT ALL TIMES.
 - DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS PRAM/STROLLER.
 - MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE PRAM/STROLLER.
 - THE SEAT IS NOT RECOMMENDED FOR A CHILD UNDER 6 MONTHS OLD.
 - USE THIS HARNESS AT ALL TIMES.
 - USE THIS STRAP TO STOP THE PRAM/STROLLER ROLLING AWAY.
 - DO NOT USE THIS SEAT WITH ANY OTHER MODELS OF PRAM/STROLLER.
- THIS SEAT IS SUITABLE FOR CHILDREN UP TO 17 KG (37 LBS) / 90 CM (35 INCH).
- DO NOT USE THIS BASSINET ONCE THE CHILD CAN SIT UP UNAIDED. MAX. WEIGHT FOR BASSINET: 9 KG (20 LBS).
 - Never leave the harness buckled when not fitted to a child in the pram/stroller because the harness can form loops which may pose a strangulation hazard.
 - The vehicle is designed for use on flat or gently sloping surfaces, do not use on higher sloping and uneven surfaces, because may be cause unstable or tipping over.
 - It is unsafe to use accessories other than those approved by the vehicle manufacturer.
 - Care should be taken if the pram/stroller is used on stairs or escalators.
 - The brakes must always be applied when the pram/stroller is not moving.
 - A child's safety is your responsibility.
 - Always engage the parking device when placing and removing your child.
 - Check that the pram body or seat unit or car seat attachment devices are correctly engaged before use.
 - To avoid injury ensure that your child is

- kept away when unfolding and folding this product.
- Take care when folding and unfolding the product to prevent finger entrapment.
 - Do not let your child play with this product.
 - This product is not suitable for running or skating.
 - Avoid serious injury from falling or sliding out. Always use the restraint system.
 - Child may slip into leg openings and strangle. Never use in reclined carriage position unless child is securely restrained.
 - Parcels and/or accessory items placed on the stroller may cause the stroller to become unstable.
 - The maximum weight of the child using this product is not to exceed 17 kg (37 lbs) for the stroller or 9 kg (20 lbs) for the carrycot. Excessive weight may cause a hazardous unstable condition.
 - The maximum permitted weight in each of the two baskets is 3 kg (6.5 lbs). Excessive weight may cause a hazardous unstable condition to exist.
 - Any load attached to the handle, backrest or sides affects the stability of the **mima xari**.
 - Do not use the product in case of broken, torn or missing parts.
 - Always use the crotch strap in combination with the waist and shoulder belts.
 - Check regularly to make sure **mima xari** functions properly and safely, maintain and clean it well.
 - For car seats used in conjunction with the **mima xari**, the car seat does not replace a cot or a bed. Should your child need to sleep, then it should be placed in a suitable pram body, cot or bed.
 - Do not use the safety bar as carrying handle.
 - Never allow your child to get out of the product unaided.
 - The fabric can discolour due to sunlight.
 - Do not use **mima xari** near an open fire or exposed flame.
 - The tyres may leave marks on some surfaces (particularly smooth floors like parquet, laminate and linoleum).
 - Never let go of the pram/stroller when parked on an incline because it may slide or tip over. Always park on a flat surface.
 - Do not add an additional mattress in the carrycot, only use the mattress provided by **mima**.

- Do not stand on the crossbars between the wheels. This is unsafe and may damage the pram/stroller.
- Check that all safety locks are engaged before placing a child in the pram/stroller.
- Do not allow children to stand on the seat.
- Make sure the hood is always fitted correctly by using the screws supplied in the canopy fixing kit.
- Always lock swivel wheels when on rough surfaces as this will help eliminate wheel wobble.
- When a child is in the carrycot or seat, the canopy must be attached at all times.
- The sun is very strong. **DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN.** The canopy or hood on this product will not give your child adequate protection from the harmful rays of the sun.
- Complies with safety requirements in accordance with AS/NZS2088:2013, EN1888-2:2018, ASTM F833:2019 and SOR/2016-167.

CARE AND MAINTENANCE

- Maintain and clean **mima xari** frequently.
- Clean the frame, seat, hood and

shopping basket regularly using a damp cloth. Do not use aggressive cleaners.

- Wipe the product with a soft, absorbent cloth after use in the rain, snow or after use on the beach.
- Store **mima xari** and its accessories in a dry place and leave them unfolded when wet.

WARRANTY

Your product complies with the current safety requirements and is warranted to be free from any manufacturing or material defects at the time of purchase.

If this product has any manufacturing and/or material defects after it has been purchased and during the warranty period (with normal use as described in the user manual), please contact your retailer.

WARRANTY CONDITIONS

The warranty is valid for 24 months only from the date of purchase. After the warranty period, your authorised **mima** service repair centre may charge you a fee for parts and labour to repair your **mima** product.

All product warranties shall not be honoured if presented to a retailer outside of the country where the product was purchased.

For the purpose of clarity, this warranty is not world-wide or universal. All costs to repair a product in these circumstances shall be for the cost of the consumer.

For the warranty to be valid you need to:

1. Provide your retailer with the original receipt.
2. Provide your retailer with a description of the defect.

PLEASE NOTE

- The warranty only covers the original owner of the product and cannot be transferred to any subsequent owner.
- The warranty entitles the owner to have the product repaired but not to an exchange or refund.
- The warranty is not valid in the following circumstances:
 - The product has been modified or repaired by a third party not authorized by **mima**.
 - Corrosion or rust on the wheels and chassis due to extreme environmental conditions, including high humidity, salt spray, ice or snow or due to insufficient maintenance.
 - The damage was caused by improper usage or maintenance or due to misuse by the user; in particular, failure to comply with these instructions for use as described in this user manual.
- The damage was caused as the result of an accident or airline/transport damage.
- Normal wear and tear should be expected when this product is used daily.
- The fabric may become discoloured or become damaged due to washing or excessive exposure to direct sunlight.
- The damage is the result of overloading (exceeding the maximum weight allowance for the child and any items being carried) on the stroller.

GETTING STARTED

FIRST SETUP


Unfolding the chassis

- **WARNING:** *A child should not be near to the stroller when folding or unfolding!*

Push the folding latch sideways to unlock the handlebar.

Pull up the handlebar while holding down the tip of the chassis with your foot.

Continue to pull the handlebar towards you until the chassis completely unfolds.

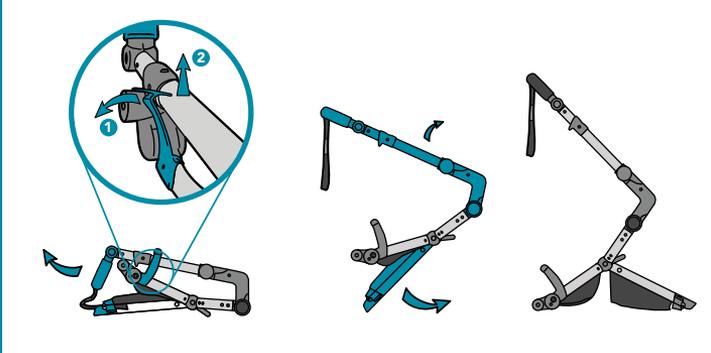

WHEELS


- *Please note the L/R indication on the chassis and on each wheel.*


Attach rear wheels

Press in the wheel axle hub and insert the axle into the wheel fitting. Check if the wheels are properly attached by attempting to pull them out again.

Remove rear wheels

Press in the wheel axle hub and pull the wheel off.

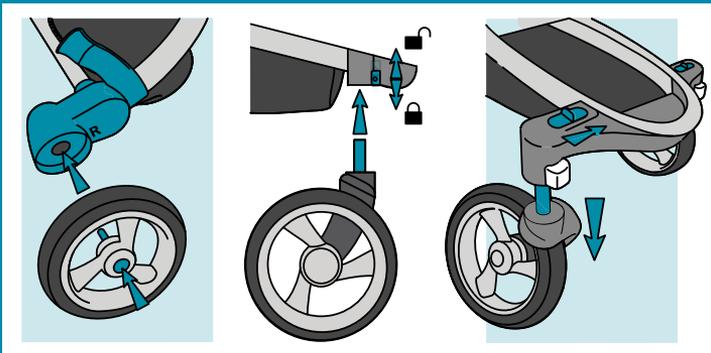

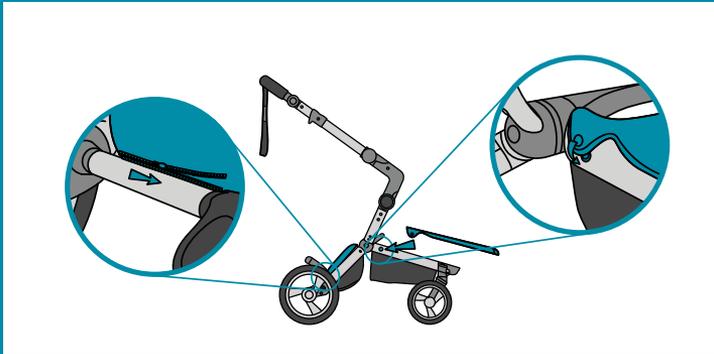

Attach front wheels

Insert the wheel rod into the wheel fitting and push it in until it clicks.

Front wheel swivel lock

Use the front wheel swivel lock when you are using **xari** on rough terrain. Push the swivel lock button down to activate. Pull it up again to deactivate it.

Remove front wheels

Slide the unlock button sideways and pull out the front wheel.


BASKET COVERS

Attach front basket cover to chassis

Click the snap buttons on both sides of the front basket cover onto the studs of the chassis.

Attach rear basket cover to chassis

Zip the rear basket cover onto the rear basket.
Fix the elastic band on the inside of the rear basket cover to the basket by using the snap button.

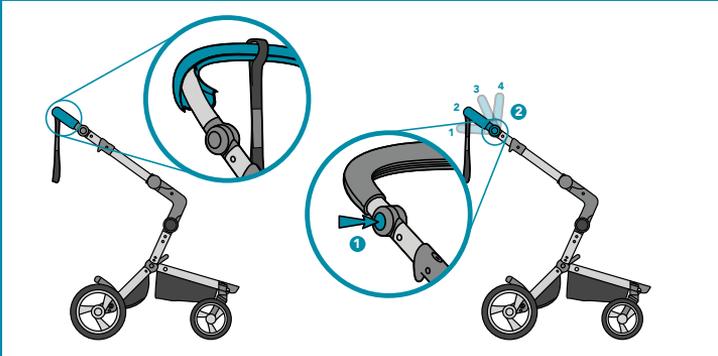

HANDLEBAR SLEEVE


Assembling handlebar sleeve

Attach the handlebar sleeve by zipping it over the handlebar.

HANDLEBAR HEIGHT

Adjust handlebar height

Press and hold both buttons located on the outside of the handlebar and rotate the handlebar to the desired position.

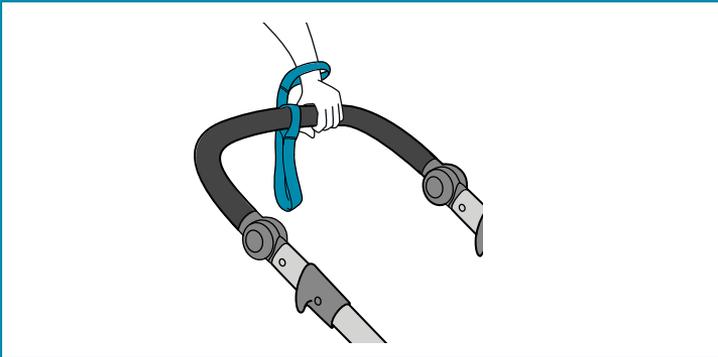


TETHER STRAP

- **WARNING:** *Always use the wrist tether strap to prevent the pram/stroller from rolling away.*

Use tether strap

Slide your hand through the tether strap whenever you use the pram/stroller.

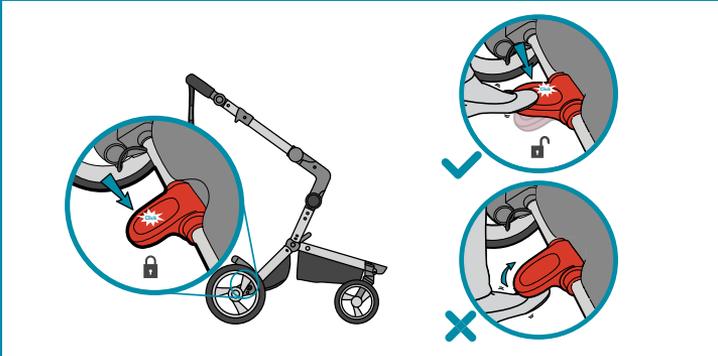

PARKING BRAKE

- **WARNING:** *Always apply the brake even when standing still for only a few moments!*

Apply and release parking brake

Press the brake pedal down to park. Press it down again to release. Do not attempt to push up the brake pedal with your foot.



UNFOLDING THE CHASSIS (WITHOUT SEAT)

- **WARNING:** *A child should not be near to the stroller when folding or unfolding!*


Push the folding latch sideways to unlock the handlebar.

Pull up the handlebar while holding down the tip of the chassis with your foot.

Continue to pull the handlebar towards you until the chassis completely unfolds.


FOLDING THE CHASSIS (WITHOUT SEAT)

- **WARNING:** *A child should not be near to the stroller when folding or unfolding!*
- **IMPORTANT:** *Make sure the storage baskets are empty before folding the chassis.*

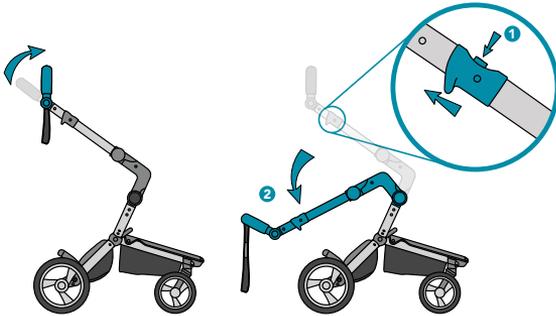

Rotate the handlebar into position 4. Push the safety button down, then pull the 2 folding locks upwards, then lower the handlebar section down.



Grab the chassis at the two hinge parts and pull it upwards so that the front section fork folds down until it clicks onto the folding latch. Let the chassis stand and rest onto the front wheels.

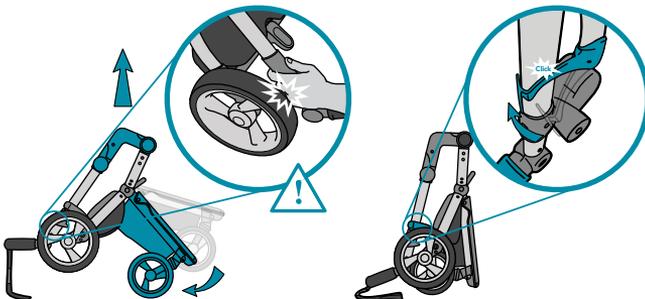

CARRYING THE CHASSIS (WITHOUT SEAT)

Option 1

To transport the chassis, hold the carrying handle on the chassis and lift it up.

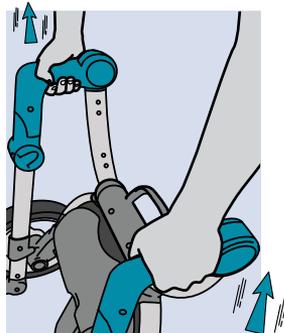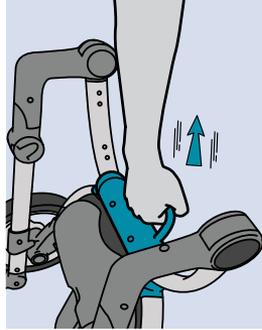

Option 2

To transport the chassis, grab the chassis at the two hinge parts and lift it up.

FOLDING THE CHASSIS (WITH SEAT)

- **WARNING:** A child should not be near to the stroller when folding or unfolding!
- **IMPORTANT:** *xari* can be folded with a **seat** attached (in its upright position and forward facing only).
- **IMPORTANT:** Make sure the storage baskets are empty before folding the chassis.





Rotate the handlebar into position 4
Push the safety button down, then pull the 2 folding locks upwards, then lower the handlebar section down.

Grab the chassis at the two hinge parts and pull it upwards so that the front section fork folds down until it clicks onto the folding latch.
Let the chassis stand and rest onto the front wheels.



CARRYING THE CHASSIS (WITH SEAT)

To transport the chassis, grab the chassis at the two hinge parts and lift it up.

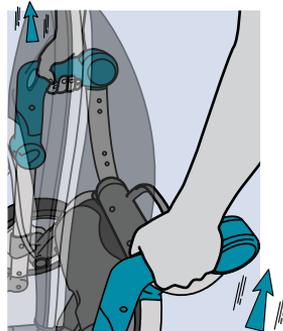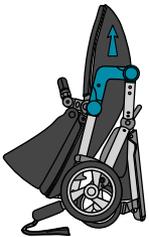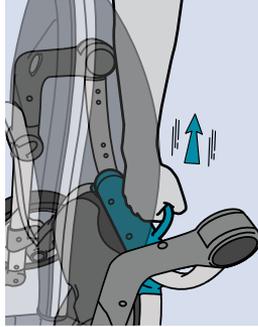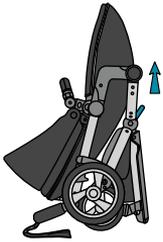



STAGE 1: BABY


CARRYCOT

Set up carrycot

- **IMPORTANT:** Carrycot must only be used in POSITION III, horizontal position. The canopy must be fitted at all times.
- When using *xari* for children under the age of 6 months, we recommend using the supplied carrycot until the child can sit unaided.
- The carrying handle shall be left out of the pram body during use carrycot.

Zip open the seat and take out the carrycot. Push the two flaps underneath the carrycot tube.

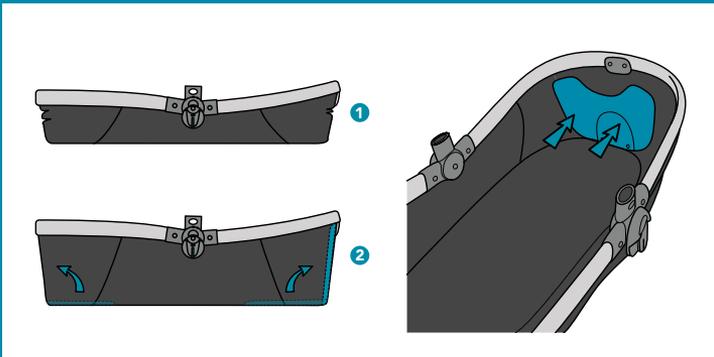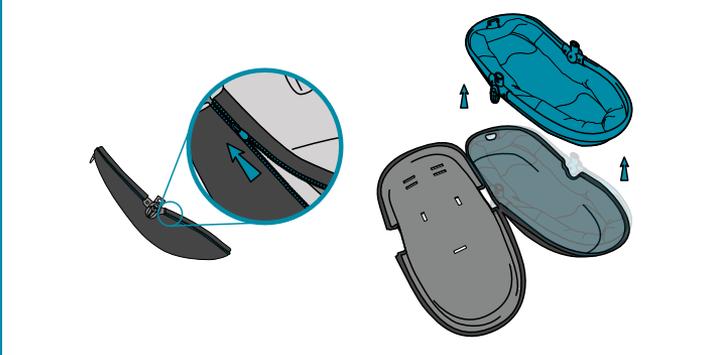

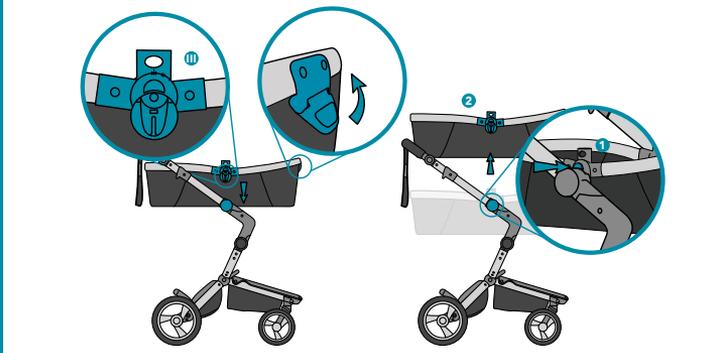


Adjust carrycot angle

It is easier to fit the carrycot onto the chassis if the attachment brackets are in position III, pointing straight downwards. To do this, pull the angle adjustment lever and rotate the brackets. The carrycot angle can also be adjusted when fitted to the chassis.


Attach carrycot

Position the carrycot so that the angle adjustment lever is at the front end of the stroller. Lower the carrycot onto the chassis until it clicks in place. Place the mattress inside the carrycot.

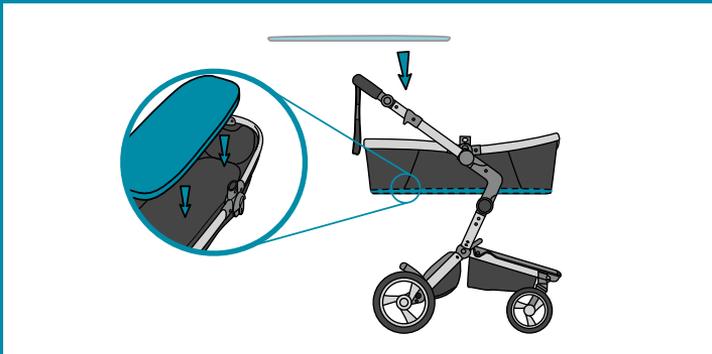

Remove carrycot

Remove the mattress, the safety bar and the canopy. Press the two buttons on both sides of the carrycot and lift it off.

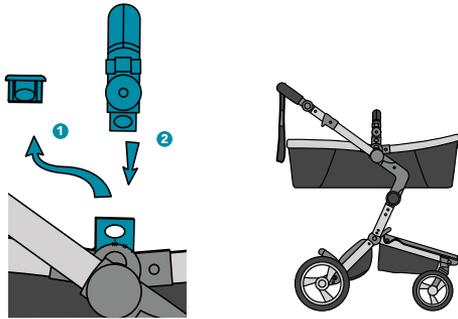

SAFETY BAR

- *Always use the safety bar for the safety of your child.*

Remove safety bar covers


Push the buttons in and slide the covers off. Keep the covers in a safe place for future use.

Attach safety bar

While pressing the two buttons on the outside of the safety bar, push it down onto the seat frame, until it clicks. Check if the safety bar is properly attached by attempting to pull it out.

Remove safety bar

Press the buttons on the outside of the safety bar and pull it up.

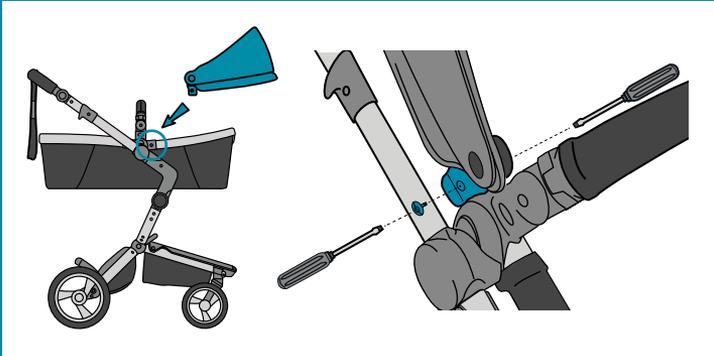

CANOPY

- **IMPORTANT:** *The sun is very strong. DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN. The canopy or hood on this product will not give your child adequate protection from the harmful rays of the sun.*
- *When a child is in the carrycot, the canopy must be attached all times. When the canopy becomes wet, keep it open and let it dry before closing it.*

Attach canopy to carrycot

Push the canopy clips onto the seat frame until they click in place.

Canopy fixing screws

Use the canopy fixing screws to secure the canopy clips onto the frame. Use two flathead screwdrivers to tightly screw them onto the outside of each canopy clip.

Open/close canopy

Pull the canopy flaps to open.
Push the canopy flaps down to close.

Remove canopy

Remove the fixing screw. Release the velcro flap at the top of the canopy. Pull the canopy clips outwards and pull them up to remove them from the seat frame.

APRON

Attach apron to carrycot

First, zip the apron flap onto the apron body. Place the apron over the carrycot frame. Click the snap buttons on both sides of the apron onto the studs of the carrycot frame.

Adjust apron


The upper apron flap can be placed into two different positions, which are magnetized.

Collapse carrycot

Release the side flaps from the carrycot frame.

Open the seat and position the collapsed carrycot inside the seat. Align the angle adjustment lever with the hole in the rear shell of the seat.

Make sure the seat brackets are clear of the seat.

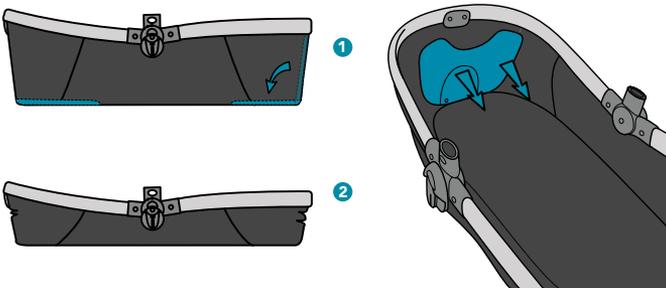



STAGE 1: TODDLER


SAFETY HARNESS

Set up harness

- *Whenever a child is placed in the seat, ensure that the safety harness is correctly fitted.*
- *The shoulder straps can be set at two different height positions. Choose the position closest to the top of the child's shoulders.*

Take each harness attachment and slide off the bottom section. Push the harness attachment through its corresponding hole in the seat pad and the seat. Zip the seat open and slide the bottom part onto the harness attachment from the inside of the seat until it clicks into place.

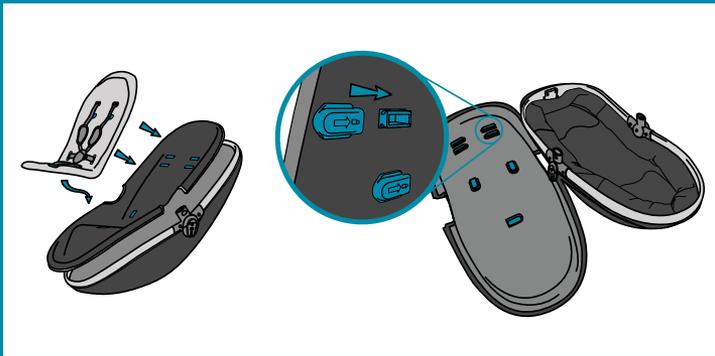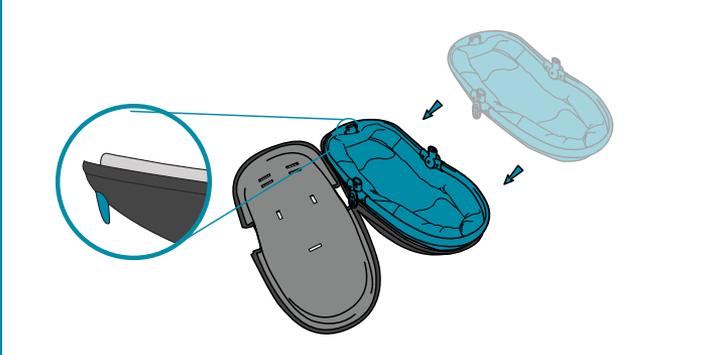

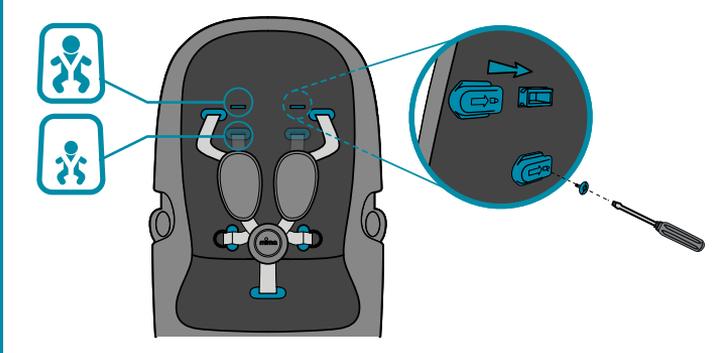

Use the harness fixing screws to secure the harness attachments.

Adjust harness strap

The harness straps can be adjusted to better fit your child.


SAFETY BUCKLE


Buckle up

Attach the shoulder harness to the waist belt clip. Insert the waist belt clip into the buckle and press until it clicks.

Buckle down

Push the central buckle button to release the harness.

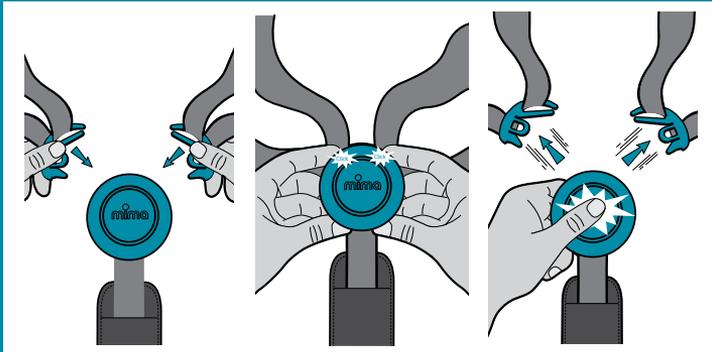

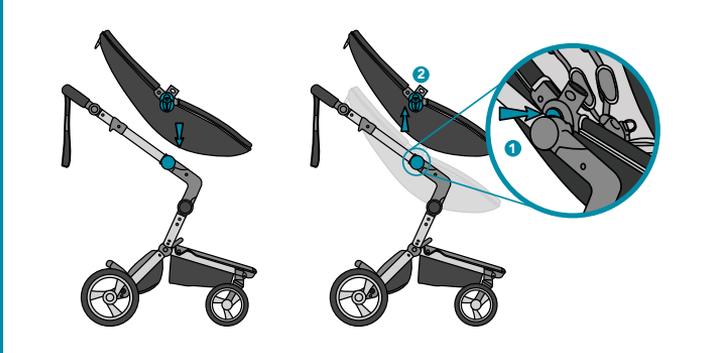

SEAT


- *The seat is suitable for children from the age of 6-36 months and up to 17 kg (37 lbs).*
- *The seat can be attached either forward facing or backward facing.*

Attach seat

Hold the adjustment lever and lower the seat onto the chassis until it clicks in place.

Remove seat

Press the two seat release buttons on both sides of the seat and lift it up.

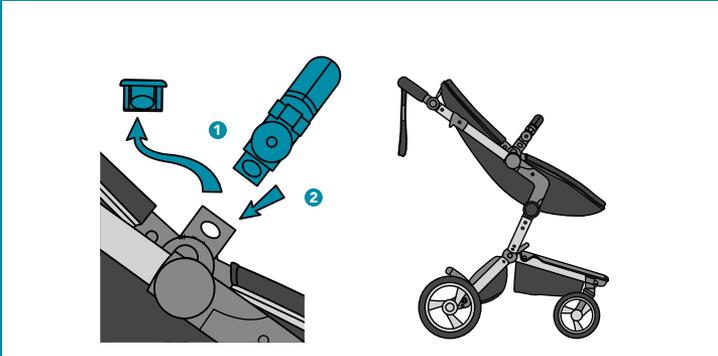

SAFETY BAR

- *Always use the safety bar for the safety of your child.*

Remove safety bar covers


Push the buttons in and slide the covers off. Keep the covers in a safe place for future use.

Attach safety bar

While pressing the two buttons on the outside of the safety bar, push it down onto the seat frame, until it clicks. Check if the safety bar is properly attached by attempting to pull it out.

Remove safety bar

Press the buttons on the outside of the safety bar and pull it up.

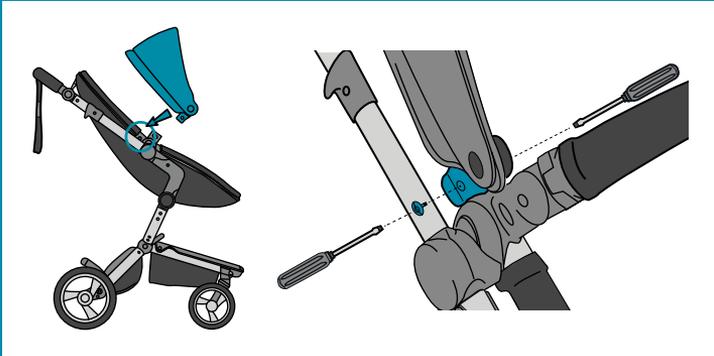

CANOPY

- **IMPORTANT:** *The sun is very strong. DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN. The canopy or hood on this product will not give your child adequate protection from the harmful rays of the sun.*
- *When a child is in the seat, the canopy must be attached all times. When the canopy becomes wet, keep it open and let it dry before closing it.*

Attach canopy to seat

Push the canopy clips onto the seat frame until they click in place.

Canopy fixing screws

Use the canopy fixing screws to secure the canopy clips onto the frame. Use two flathead screwdrivers to tightly screw them onto the outside of each canopy clip.

Open/close canopy

Pull the canopy flaps to open.
Push the canopy flaps down to close.


Remove canopy

Remove the fixing screw. Release the velcro flap at the top of the canopy. Pull the canopy clips outwards and pull them up to remove them from the seat frame.

RECLINING THE SEAT


- *There are three angles for the seat.*

Pull the lever on the top of the seat up, and rotate the seat to the desired angle.

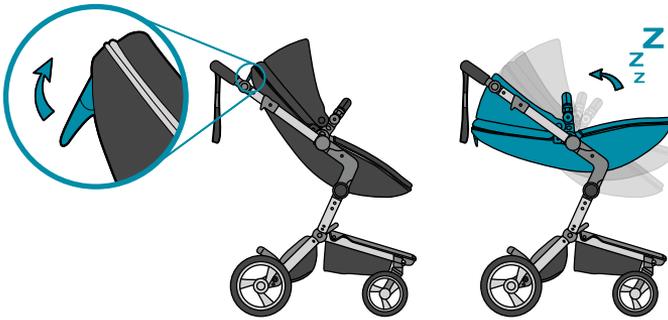

REVERSIBLE SEAT

The seat can be attached either forward facing or backward facing.

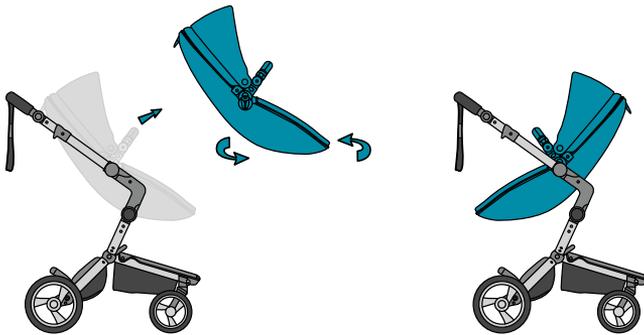

ACCESSORIES

CAR SEAT

- **WARNING:** *The car seat is suitable for children from the age of birth to 12 months and up to 13 kg (28 lbs).*
- **WARNING:** *The seat can be attached **backward facing** only.*
- *Please note the L/R indication on the chassis and on each car seat adapter.*

Attach car seat adapter (sold separately)

Hold the adapters and put onto the chassis until they click in place.



Attach car seat


Hold the adjustment lever and lower the seat onto the car seat adapter until it clicks in place.

Open/close car seat canopy

Pull the canopy flaps to open.

Push the canopy flaps down to close.

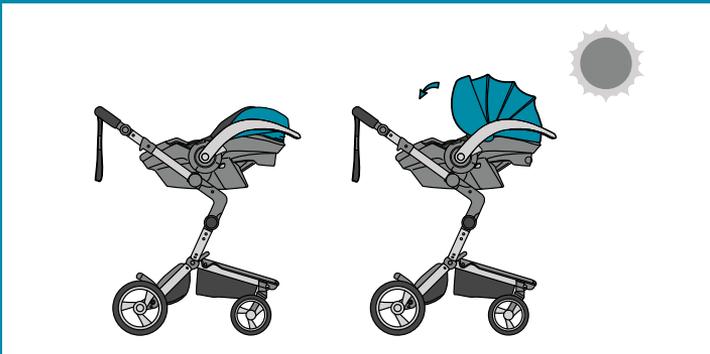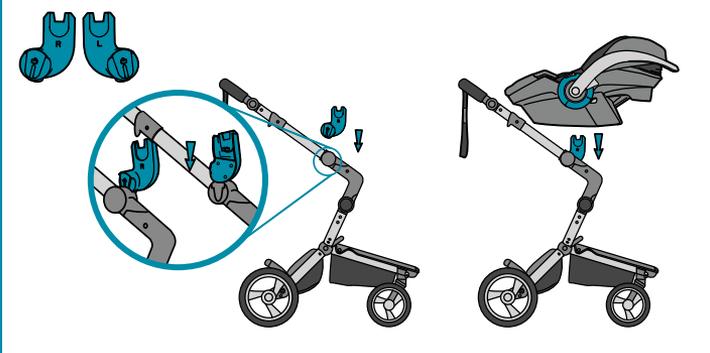

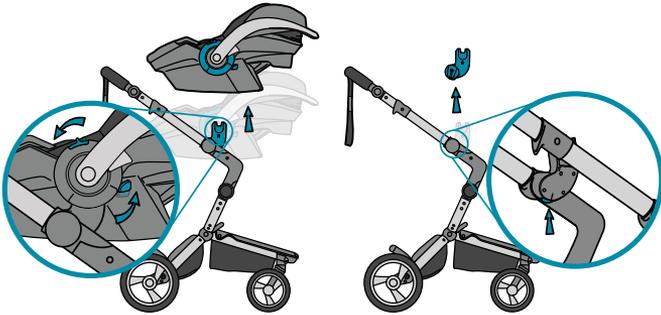


Remove car seat

Pull down the lever on each side the car seat and lift it up.

Remove car seat adapter

Press the two release buttons on both sides of the car seat adapters and lift them up.

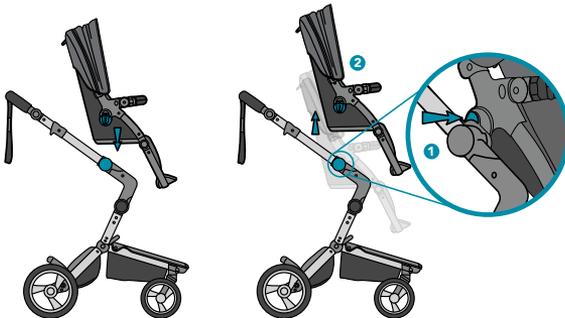

SPORT SEAT


- The **sport seat** is suitable for children from the age of 6-36 months and up to 17 kg (37 lbs).
- The seat can be attached either forward facing or backward facing.

Attach sport seat

Hold the adjustment lever and lower the seat onto the chassis until it clicks in place.

Remove sport seat

Press the two seat release buttons on both sides of the seat and lift it up.

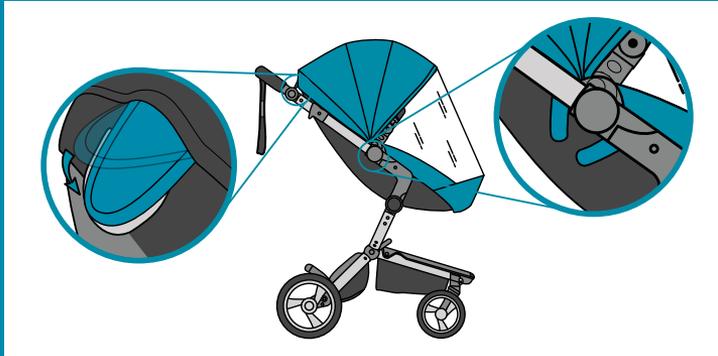

RAIN COVER


- **IMPORTANT:** *Make sure you attach the canopy before attempting to use the rain cover.*

Attach rain cover to seat

Fully open the canopy.

Position the rain cover over the canopy so the angle adjustment lever goes through the hole in the rain cover.

Stretch the rain cover over the seat and fix the velcro straps around the seat brackets.

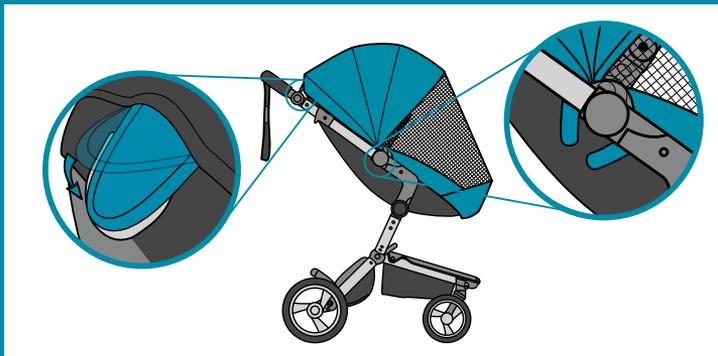

MOSQUITO NET

- **IMPORTANT:** *Make sure you attach the canopy before attempting to use the mosquito net.*

Attach mosquito net to seat

Fully open the canopy.

Position the mosquito net over the canopy so the angle adjustment lever goes through the hole in the mosquito net.

Stretch the mosquito net over the seat and fix the velcro straps around the seat brackets.

WINTER OUTFIT

Foot cover

Position the foot cover on the seat and fix the straps around the seat brackets by using the snap button.

Handmuff

Position the handmuff around the handlebar and fix it by using the snap button.

Canopy cover

Fully open the canopy cover. Position the canopy cover over the canopy. Fix the velcro straps of canopy cover around the seat brackets.

Attach fur trim to canopy cover

Zip the fur trim onto the canopy cover.

Attach wind protector to canopy cover

Zip the wind protector onto the canopy cover and fix it by using the snap button.

