

zigi





Weights - Measurements

zigi

button to adjust handlebar height

canopy window

Lb 18.5
Kg 8.4

canopy

reclining backrest

5 point safety harness
with shoulder pads

basket

front suspension

transparent wheels

H: 102 cm

DIMENSIONS (LxWxH)

without folding: 67x45x102 cm / 26x45x102 inch

Total weight: 8.4  18.5 

L: 67 cm

W: 45 cm



 
 
Folding



zigi characteristics:

- Weight : 8.4 kg-18.5 Lbs
- Maximum child weight : 17 kg - 44 Lbs
- Dimensions when folded : L45 x W25 x H56 cm
L18 x W10 x H22 inch
- Compact, one-hand folding
- Canopy XL with not one but three sunvisors, the second and third which provides extra UV protection. Includes window, which also provides ventilation
- Transparent wheels
- Large basket
- Innovative rear suspension
- Reclining Backrest
- Adjustable handlebar
- 5 point safety harness
- Includes raincover
- Colours : Charcoal, Olive Green, Midnight Blue

Compact, one-hand folding

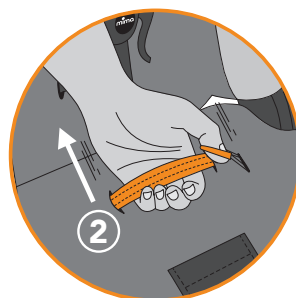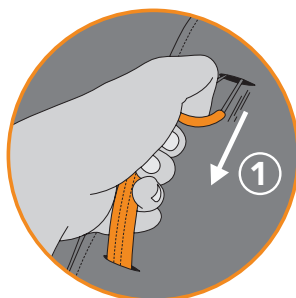

Canopy



pull up to open canopy



push down to close canopy



Extended canopy :



Recline



3 recline positions :



1 Sitting



2 Resting



3 Sleeping



Wheels



 
 
 
front suspension



transparent wheels
with 360° spin




Safety Harness

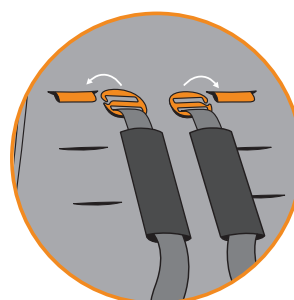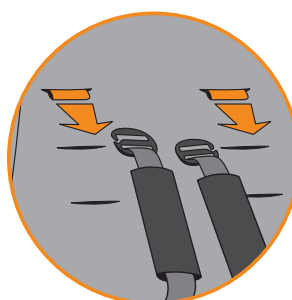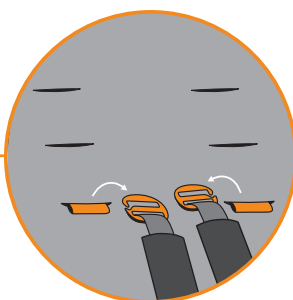




Available Colours

 

Charcoal
A301201

 

Midnight Blue
A301800



Olive Green
A301401





What's included



Chassis + Softgoods



Rain cover



Accessories

Sporty Changing Bag



S3201-10



S3800-10



S3401-10

Footmuff



S301201-06BB



S301800-06BB



S301401-06BB



Accessories

Winter Outfit



S3201-23



S3800-23



S3401-23

Safety Bar



A301500-02



A301615-02



A301609-02

Mosquito Net



S301-04

Rain Cover



S301-18

Travel Bag



S301-26

Clip



G101-22X

Cup Holder



 
G102-21

Adapter Kit



G4105

Care and maintenance

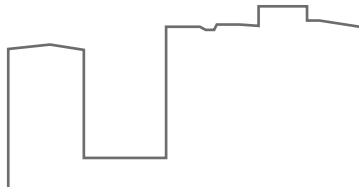

Cleaning the seat

The seat may be spot cleaned using a damp sponge with a mild soap or detergent.

Allow to dry completely before folding or storing away.

If the canopy, accessories or seat become wrinkled or creased after the buggy has been folded for a long period of time, simply iron the fabric on the reverse side. Be sure to place a damp cloth between the iron and the fabric.

In some climates the covers and trims may be affected by mould and mildew. To help prevent this from occurring, store the product in a well ventilated area and refrain from folding.

Cleaning the chassis

Brush off excess dirt and remove sand and salt after visiting the beach; wipe clean with a moist cloth and mild cleaning agent.

Lubrication of moving parts

Periodically lubricate the wheels, the hinges and other sliding parts using light oil or silicon spray. Do not use heavy oil as this will attract dust and grit which tends to clog and damage moving parts.

i Follow these steps regularly in order to keep the buggy in perfect condition.

⚠ The fabrics and plastics are highly resistant, but excessive sun exposure can cause discolouring.

Guarantee



i Register your product online at www.mimakids.com

Doing this will activate your warranty and allow us to keep you informed of possible product updates.

Your product adheres to current safety requirements and it is guaranteed to be in perfect condition at the time of purchase.

If this product shows signs of fabrication faults during the warranty period (after normal use and following the guidelines laid out in the user manual), please contact the seller.

Warranty conditions:

-The warranty period is 24 months from the date of purchase. This warranty period is not extendable, even in the event of repair.

-For the warranty to be valid you need to:

1. Have your product registered online at www.mimakids.com
2. Provide the original purchase receipt given to your retailer.
3. Provide a description of the defect to your retailer.

-The warranty is made to the original owner of the product and is not transferable to any subsequent owner.

-The warranty provides a right to repair but does not permit exchanges or refunds.

The warranty does not apply in the following circumstances:

-The product has been modified or repaired by third parties.

-Corrosion or rust on the wheels and chassis due to extreme environmental conditions including high humidity, salt spray, ice or snow or due to insufficient care.

 
-The defect was caused by improper usage or maintenance or due to anything else deemed to be the fault of the user; in particular, failure to comply with the instructions for use as described in the user manual.

-The defect was caused as a result of an accident or airline/transport damage.

-Normal wear and tear that can be expected with daily use of this product.

-Discolouration or damage to the fabric due to washing, rainwater or excessive exposure to sunlight.

-The defect is the result of overloading (exceeding the maximum weight allowance for the child and any items being carried).

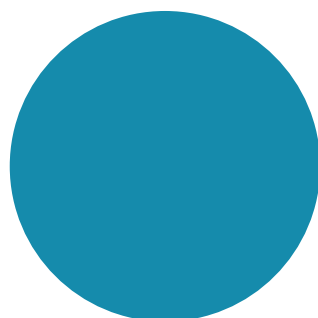

www.mimakids.com
info@mimakids.com

Please note that colours and contents may vary from those illustrated.
With reservations for misprint and change of product range.
Regarding mima accessories, always please check availability with your local retailer.
©Copyright 2017 mima International Ltd. All rights reserved.